

Aurora PN-License

PN comes with a one year free trial, afterwards is licensed on 1 year or 5 year terms.

GRACE PERIOD

Upon the first login after the license has expired, PN will enter a 15 day grace period where the system functions normally. This is for users that don't access the system that often to give them a time period to get the licensing done while still allowing them to make the changes they need to.

LIFE SAFETY

Once the Grace Period has elapsed, PN will enter into Life Safety mode. This allows Administrators to make critical changes without having a valid license. The following actions are permitted in Life Safety mode:

- ▶ Pulsing Doors
- ▶ Removing Users/ Credentials
- ▶ Overriding Doors, Floors, Inputs and Outputs
- ▶ Override to Crisis Level
- ▶ Removing Administrators, Changing Passwords and Modifying Permissions
- ▶ Panel Commands (Update Panels, Reset Anti-Passback, Disconnect Panel, Firmware Update, etc.)

The following actions are disabled when in life safety mode:

- ▶ Adding/ Modifying Users/ Credentials
- ▶ Adding/ Modifying Holiday
- ▶ Viewing Cameras/ Reports
- ▶ Changing Time Zones

PART NUMBERS	TIER	DOORS	CAMERAS	PARTITIONS	ELEVATORS	LDAP	UNMANAGED DOORS
AACL-PNES-1	Essentials	40	40	1	No	No	No
ACCL-PNES-5	Essentials	40	40	1	No	No	No
ACCL-PNSM-1	Small	80	80	5	Yes	Yes	Yes
ACCL-PNSM-5	Small	80	80	5	Yes	Yes	Yes
ACCL-PNMI-1	Mid	120	120	20	Yes	Yes	Yes
ACCL-PNMI-5	Mid	120	120	20	Yes	Yes	Yes
ACCL-PNLA-1	Large	240	240	40	Yes	Yes	Yes
ACCL-PNLA-5	Large	240	240	40	Yes	Yes	Yes
ACCL-PNEN-1	Enterprise	Unlimited					
ACCL-PNEN-5	Enterprise	Unlimited					
AACL-AP05-1	Partition5			1			
AACL-AP05-5	Partition5			1			
AACL-AP10-1	Partition10			50			
AACL-AP10-5	Partition10			50			
AACL-AP20-1	Partition20			20			
AACL-AP20-5	Partition20			20			